

COMPLETE AIR SPRINGS





AKTAŞ GROUP

POWERTECH®

Order No : 130004 / 9725 K



Complete

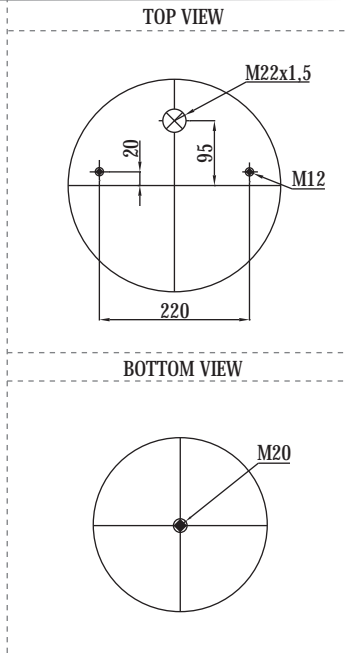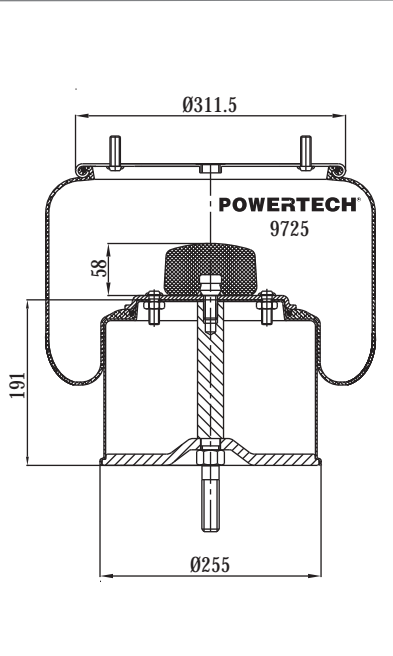

>> CROSS REFERENCE		>> OEM REFERENCE	
• AIRTECH	130002 3725 K	• GIGANT	166217 246149
• CONTITECH	725 N P02		
• FIRESTONE	1T66F-10.8 W01 M58 8969		
• PHOENIX	1 DF 32		
• TAURUS	UR 836-11		
• DUNLOP FR	D14U38		
• CF GOMMA	1 TCS 360-45 202964		

Order No : 130025 / 9810 K



Complete

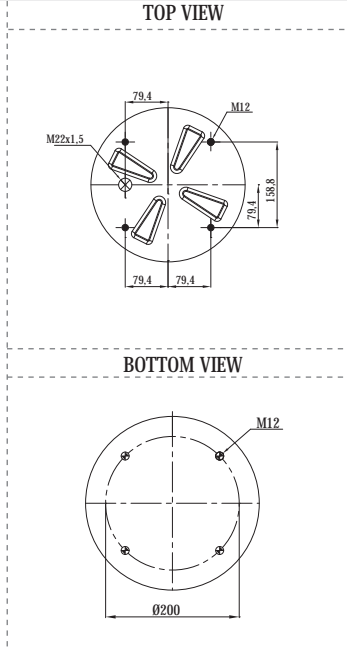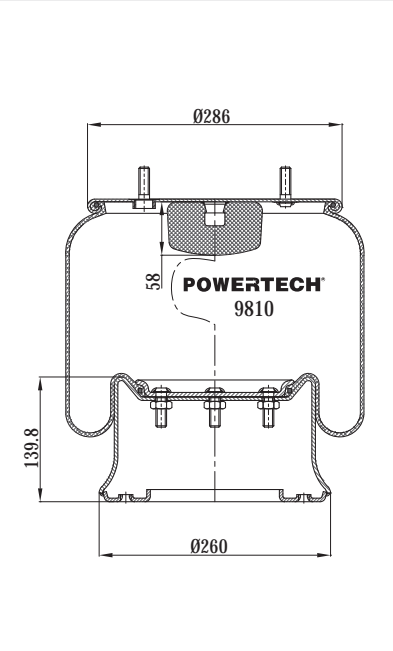

>> CROSS REFERENCE		>> OEM REFERENCE	
• AIRTECH	130022 3810 K	• BERTOLETTI	91619007
• CONTITECH	810 MB	• BERTOJA	45402002
• FIRESTONE	1T19L-7 W01 M58 6345 W01 M58 8775	• DAF	1 384 273
• PHOENIX	1 D 28 A-2	• GRANNING	15635
• TAURUS	KR 621-26	• HENDRICKSON	B 2065
• DUNLOP UK	PNP311780000	• IVECO	9988467
• DUNLOP FR		• NEWAY	211 586
• GOODYEAR	1R14-716	• R.O.R./MERITOR	21208082 D13B204517
• CF GOMMA	1T 19E-1 87413/1	• RENAULT VI	5.000.452.939
		• SAF	2.228.0002.00 2.228.2402.00 2.228.2602.00 2.228.2202.00 2.228.2102.00
		• SAF TYPE	E1 2918 AR 414
		• SAMRO	25008
		• T.E.C.	506243/ 01
		• VOLVO	1 080 707
		• WEWELER	US 87413 US 07337
		• YORK	785168

Order No : 130105 / 9813 K

Complete


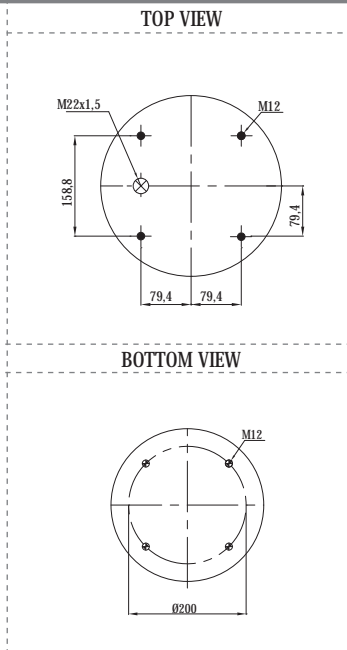
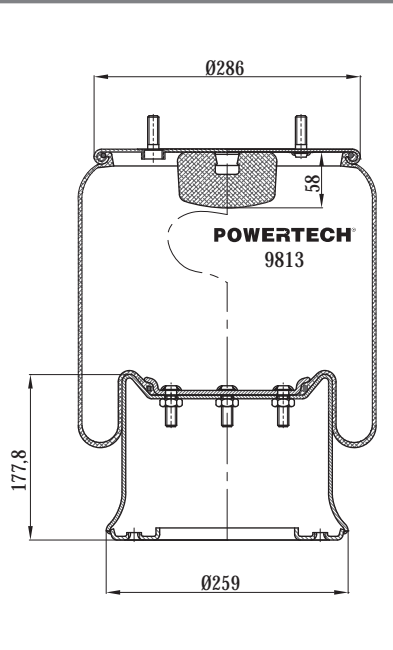


>> CROSS REFERENCE		>> OEM REFERENCE	
• AIRTECH	130102 3813 K	• BERTOLETTI	91619005
• CONTITECH	813 MB	• BATTAGLINO	2211400
• FIRESTONE	1T19L-11 W01 M58 6364	• CARDI	58051000
• PHOENIX	1 D 28 B-2	• DAF	1 384 274
• TAURUS	KR 622-26	• E.R.F.	143908-3
• DUNLOP UK	PNP311770000	• EVO BUS	4.731.030.000 / 4.731.033.000
• DUNLOP FR	D13B19	• FRUEHAUF	003615E
• GOODYEAR	1R14-705	• GRANNING	15634
• CF GOMMA	1T 19E-2	• HENDRICKSON	B 2063
			Y505859 785170
		• KASSBOHRER	4.731.033.000
		• NEWAY	22 282 / 21215633
		• R.O.R./MERITOR	21215633
		• RENAULT VI	5.010.130.925 5.000.790.692
		• SAF	2.229.0003.00 / 2.229.2103.00 2.229.2403.00 / 2.229.2603.00
		• SAMRO	2500009
		• TEC	505859/ 01
		• TERBERG	21071483
		• TITAN	91687700000
		• TRAILOR	0036158E / 650234Y
		• VIBERTI	128147122
		• WEWELER	US 87408 US 07345
		• YORK	785170

⊕ Threaded hole ⊗ Air inlet ○ Bolt/Stud ⊗ Combo stud

Order No : 135464 / 9813 A KPP




Complete

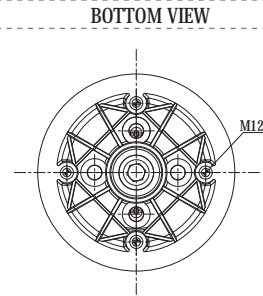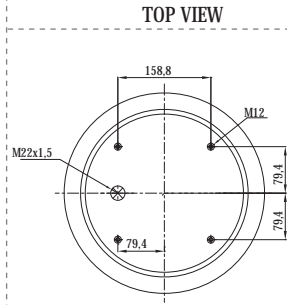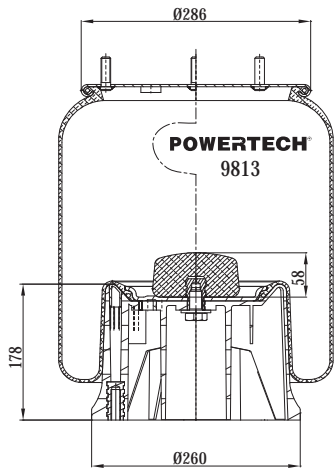

>> CROSS REFERENCE	>> OEM REFERENCE
• AIRTECH 135462	• BERTOLETTI 91619005
3813 A KPP	• BATTAGLINO 2211400
• CONTITECH 813 MB	• DAF 1 384 274
• FIRESTONE 1T19L-11	• E.R.F 143908-3
W01 M58 6364	• EVO BUS 4.731.030.000
• PHOENIX 1 D 28 B-2	4.731.033.000
• TAURUS KR 622-26	• FREUHAUF 03615E
• DUNLOP UK PNP311770000	• GRANNING 15634
• DUNLOP FR D13B19	• HENDRICKSON B 2063
• GOODYEAR 1R14-705	Y505859
• CF GOMMA 1T 19E-2	785170
87408	• KASSBOHRER 4731033000
	• NEWAY 22 282
	21215633
	• R.O.R MERITOR 21215633
	• RENAULT RVI 5010130925
	5000790692
	• SAF 2.229.000300
	2.229.210300
	2.229.240300
	2.229.260300
	• SAMRO 2500009
	• T.E.C 505859/01
	• TRAILOR 0036158E
	650234Y
	• VIBERTI 128147122
	• WEWELER US 87408
	US 07345
	• YORK 785170

Order No : 131024 / 9836 K




Complete

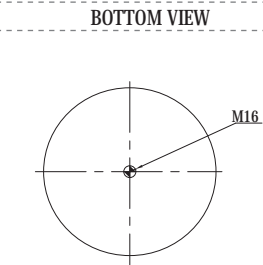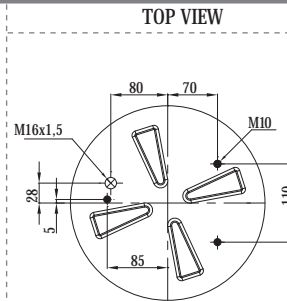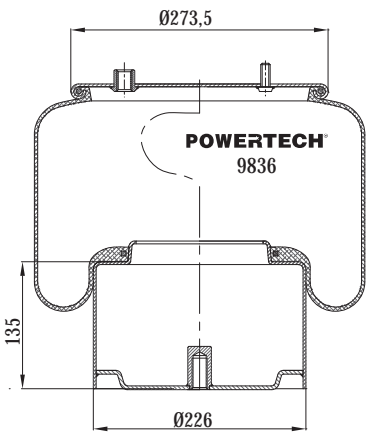

>> CROSS REFERENCE	>> OEM REFERENCE
• AIRTECH 131022	• DAF 0 388 165
3836 K	1 697 678
• CONTITECH 836 M K1	
• FIRESTONE 1T17AR-4.5	
W01 M58 8722	
• PHOENIX 1 DF 25-11	
• TAURUS KR 721-06	
• DUNLOP FR D13B32	
• GOODYEAR 1R12-712	

Order No : 131064 / 9836-02 K

Complete

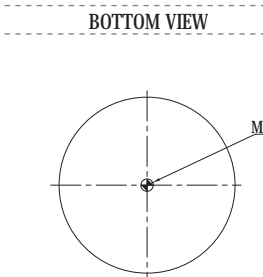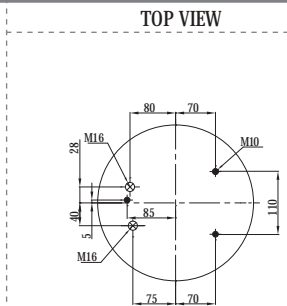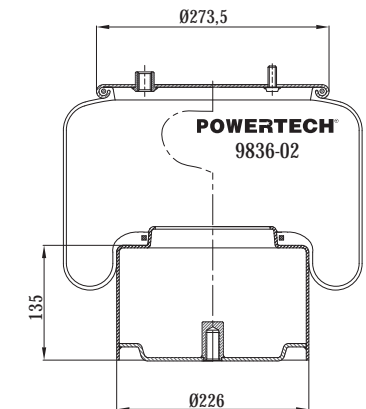

>> CROSS REFERENCE	>> OEM REFERENCE
• AIRTECH 131062	• DAF 0 388 167
3836 -02K	
• CONTITECH 836 M2 K1	
• FIRESTONE 1T17AR-4.5	
W01 M58 8721	
• PHOENIX 1 DF 25-13	
• TAURUS KR 721-03	
• DUNLOP FR D13B31	
• GOODYEAR 1R12-711	

Threaded hole
 Air inlet
 Bolt/Stud
 Combo stud

Order No : 130525 / 9881-01 K


Complete

>> CROSS REFERENCE


>> OEM REFERENCE

- AIRTECH 130522 3881-01 K
- FIRESTONE 1T66F-10.8 W01 M58 8966
- DUNLOP FR D14B36
- GOODYEAR 1R14-712
- CF GOMMA 1TC 360-45
- PHOENIX 1 DK 32-1


- BPW 05.429.40.61.1 BPW 36

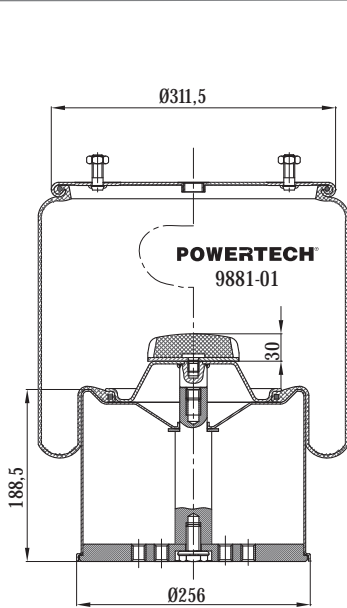

TOP VIEW

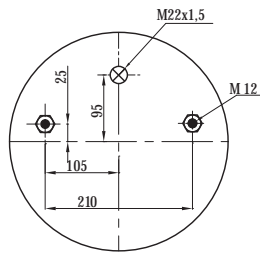

BOTTOM VIEW

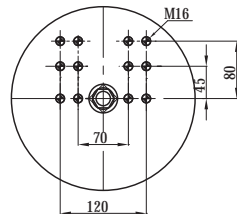

Order No : 132205 / 9881-01 KPP


Complete

>> CROSS REFERENCE


>> OEM REFERENCE

- AIRTECH 132202 3881-01 K
- PHOENIX 1 DK 32-2
- TAURUS KR 836-05
- DUNLOP FR D14B36
- GOODYEAR 1R14-748


- BPW 05.429.43.51.0 BPW 36

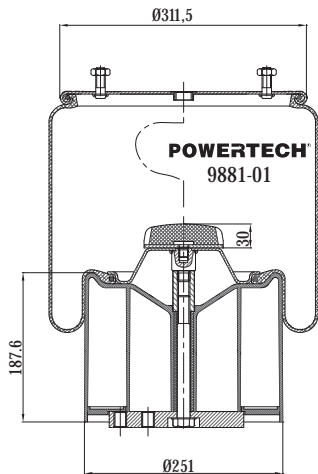

TOP VIEW

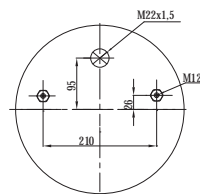

BOTTOM VIEW

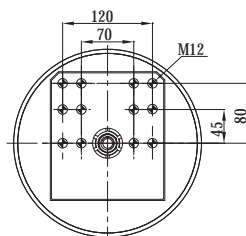

Order No : 130205 / 9940 K


Complete

>> CROSS REFERENCE


>> OEM REFERENCE

- AIRTECH 130202 3940 K


- BPW 05.429.40.93.1 BPW 30 K

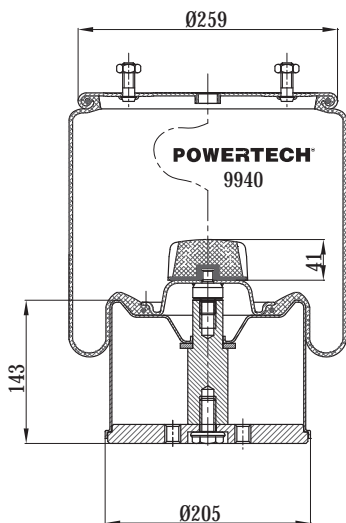

TOP VIEW

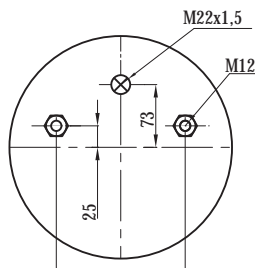


BOTTOM VIEW

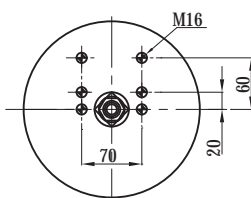


Order No : 133364 / 9940 KPP


Complete

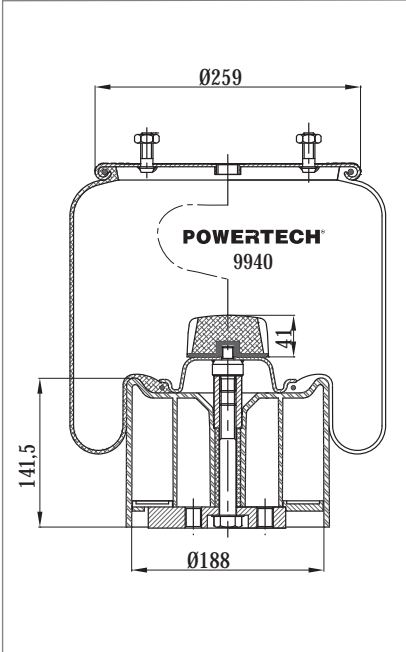

TOP VIEW

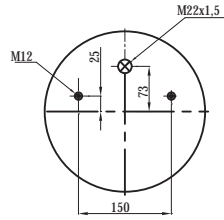

BOTTOM VIEW

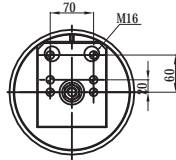

>> CROSS REFERENCE


• AIRTECH	133362
	3940 KPP
• PHOENIX	05.429.43.21.0
• DUNLOP FR	D11B36
• GOODYEAR	1R11-752

>> OEM REFERENCE


• BPW	05.429.43.21.0
	BPW 30 K
• GRANING	16919
• WEWELWER	US 510030 UD

Order No : 130225 / 9941 K


Complete

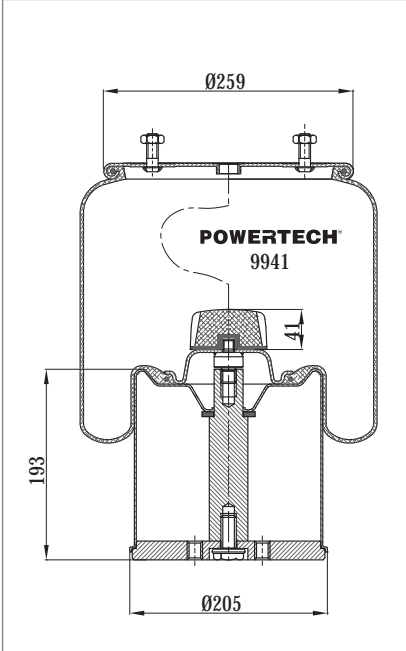

TOP VIEW

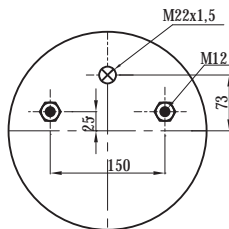

BOTTOM VIEW

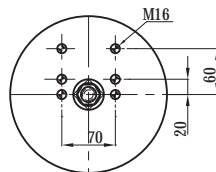

>> CROSS REFERENCE


• AIRTECH	130222
	3941 K
• FIRESTONE	1T17D-8.3
	W01 M58 8619
• PHOENIX	1 DK 21
• TAURUS	KR 730-01
• DUNLOP FR	D11B38
• GOODYEAR	1R11-762

>> OEM REFERENCE


• BPW	05.429.40.59.1
	BPW 30

Order No : 132224 / 9941-01 KPP


Complete

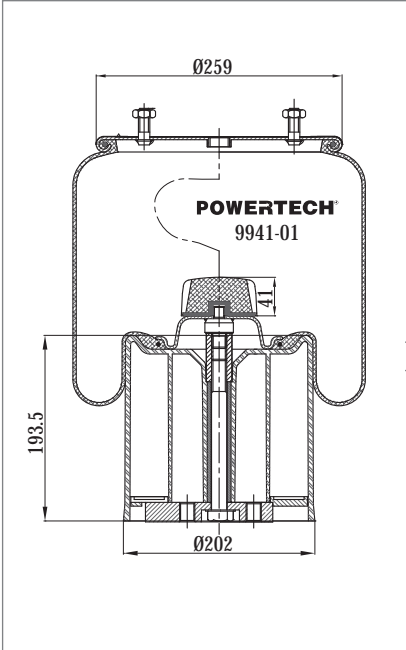

TOP VIEW

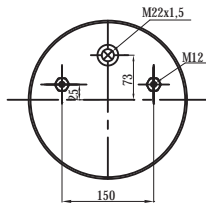

BOTTOM VIEW

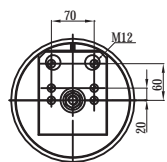

>> CROSS REFERENCE


• AIRTECH	132222
	3941-01 KPP
• PHOENIX	05.429.43.20.0
• DUNLOP FR	D11B33
• GOODYEAR	1R11-743
• CF GOMMA	1TC 300-36

>> OEM REFERENCE


• BPW	05.429.43.20.0
	BPW 30
• WEWELER	US 500-10 KD

Order No : 130284 / 94004 K


Complete

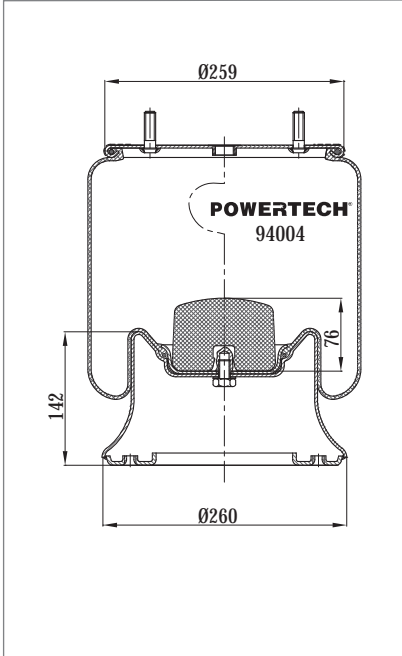

TOP VIEW

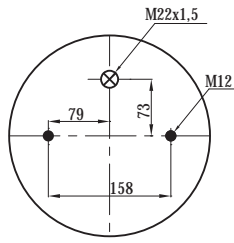

BOTTOM VIEW

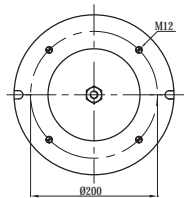

>> CROSS REFERENCE


• AIRTECH	130282
	34004 K
• CONTITECH	4004 N P03 (Steel)
• FIRESTONE	1T17BS-6
	W01 M58 6366 (Steel)
• PHOENIX	1 DK 22 E-5
• TAURUS	K 505-27 SM
• DUNLOP FR	D12B25
• GOODYEAR	1R11-706
• CF GOMMA	1T 300-33

>> OEM REFERENCE


• S.A.F.	3.229.0007.00
	3.229.0007.01
	3.229.0007.02
	2618

Order No : 132784 / 94004 KPP


Complete

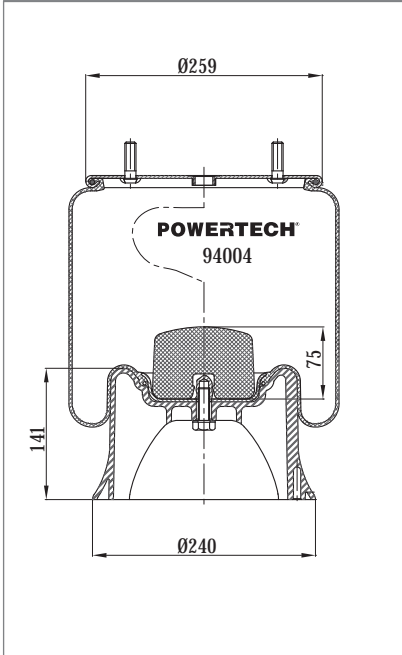

TOP VIEW

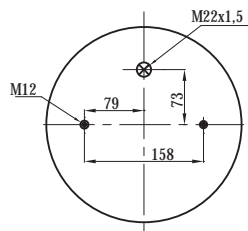

BOTTOM VIEW

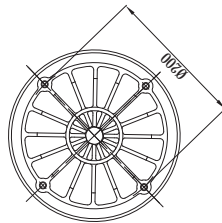

>> CROSS REFERENCE


• AIRTECH	132782
	34004 KPP
• CONTITECH	4004 N P03
• FIRESTONE	1T17BS-6
	W01 M58 6366
• PHOENIX	1 DK 22 E-8
• DUNLOP FR	D12B13
• GOODYEAR	1R11-713

>> OEM REFERENCE


• S.A.F.	3.229.0007.00
	3.229.0007.02
	3.229.0007.01
	2618

Order No : 130304 / 94022 K


Complete

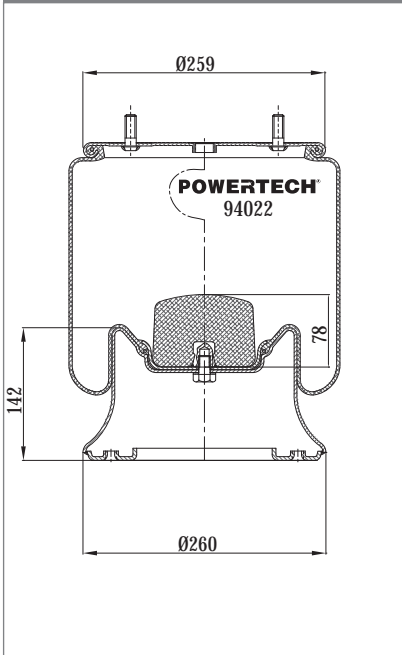

TOP VIEW

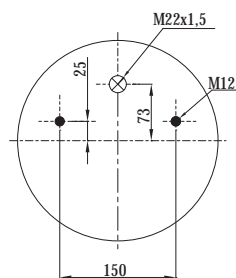

BOTTOM VIEW

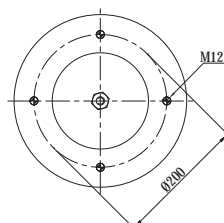

>> CROSS REFERENCE


• AIRTECH	130302
	34022 K
• CONTITECH	4022 N P03 (Steel)
• FIRESTONE	1T17BS-6
	W01 M58 6367 (Steel)
• CF GOMMA	1T 300-37

>> OEM REFERENCE


• S.A.F.	3.229.0029.00
	3.229.2129.00
	3.229.2229.00
	3.229.2429.00
	2618 V

Order No : 132804 / 94022 KPP


Complete

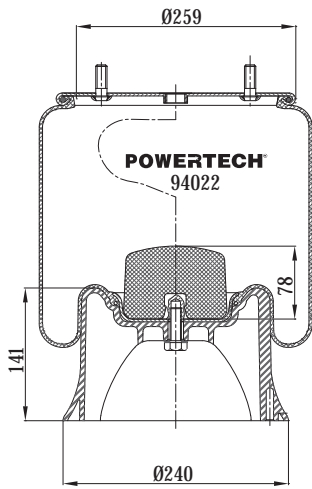

TOP VIEW

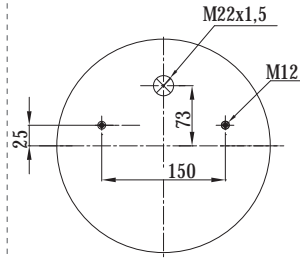

BOTTOM VIEW

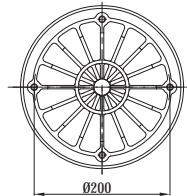

>> CROSS REFERENCE


• AIRTECH	132802
	34022 KPP
• CONTITECH	4022 N P03
• FIRESTONE	1T17BS-6
	W01 M58 6367
• PHOENIX	1 DK 22 E-9
• TAURUS	KR 725-28
• DUNLOP FR	D12B14
• GOODYEAR	1R11-714

>> OEM REFERENCE


• S.A.F.	3.229.0029.00
	3.229.2129.00
	3.229.2229.00
	3.229.2429.00
	2618 V

Order No : 130324 / 94023 K


Complete

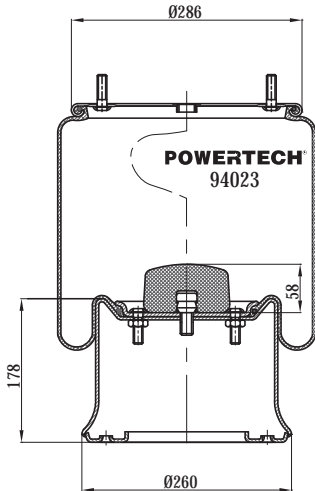

TOP VIEW

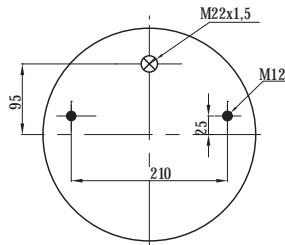

BOTTOM VIEW

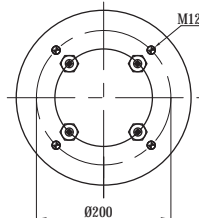

>> CROSS REFERENCE


• AIRTECH	130322
	34023 K
• CONTITECH	4023 N P03
• FIRESTONE	1T19F-11
	W01 M58 6348
• PHOENIX	1D 28 A-10
• TAURUS	KR 624-18
• DUNLOP FR	D13B26
• GOODYEAR	1R14-729
• CF GOMMA	1T 19 E-2
	204676

>> OEM REFERENCE


• S.A.F.	3.229.0031.00
	3.229.2231.00
	3.229.2431.00
	3.229.2131.00

Order No : 134144 / 94156 K


Complete

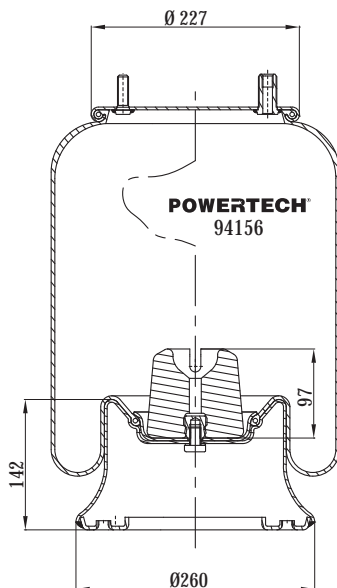

TOP VIEW

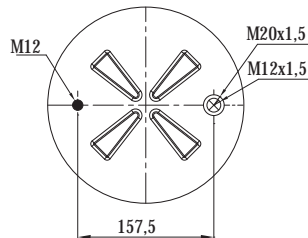

BOTTOM VIEW

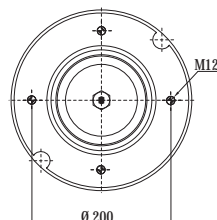


>> CROSS REFERENCE

• AIRTECH	134142
	34156 K
• FIRESTONE	1T15M-6


>> OEM REFERENCE

Order No : 130384 / 94156 KPP


Complete

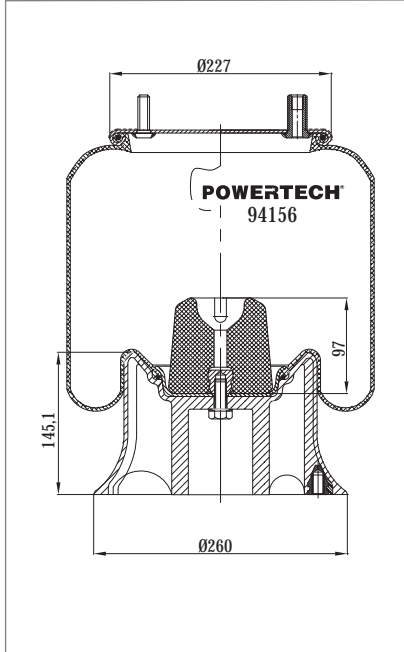

TOP VIEW

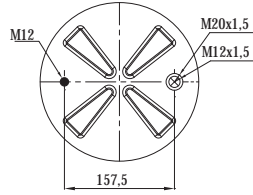

BOTTOM VIEW

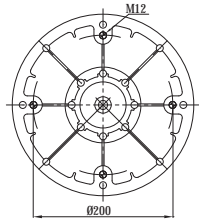

>> CROSS REFERENCE


• AIRTECH	130382
	34156 KPP
• CONTITECH	4156 N P15
• FIRESTONE	1T15M-6
	W01 358 9361
• PHOENIX	1 DK 21 A-2
• DUNLOP FR	D12B19
• GOODYEAR	1R12-719
• CF GOMMA	1T 323-33

>> OEM REFERENCE


• HENDRICKSON	HA 100001
• R.O.R./MERITOR	21215762
	21226046
	21215761
• WEWELER	US 35864

Order No : 131304 / 94157 KPP


Complete

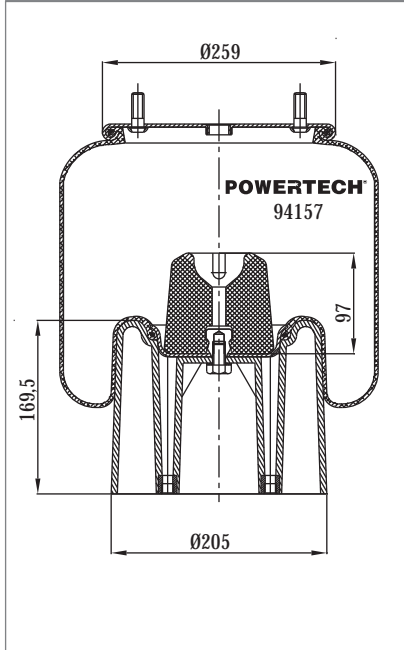

TOP VIEW

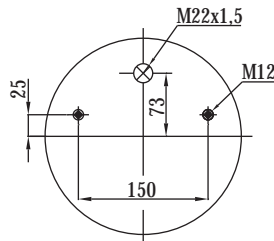

BOTTOM VIEW

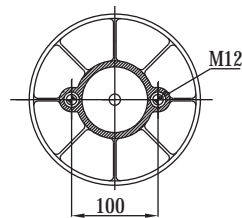

>> CROSS REFERENCE


• AIRTECH	131302
	34157 KPP
• CONTITECH	4157 N P04
• PHOENIX	1 DK 21 A-4
	1 DK 21 A-8
• TAURUS	KR915-54
• DUNLOP FR	D12B18

>> OEM REFERENCE


• DISCOS/MERCEDES	A 946 328 14 01
• R.O.R./MERITOR	21221307
• WEWELER	US 06287
	US 07364

Order No : 133204 / 94158 KPP


Complete

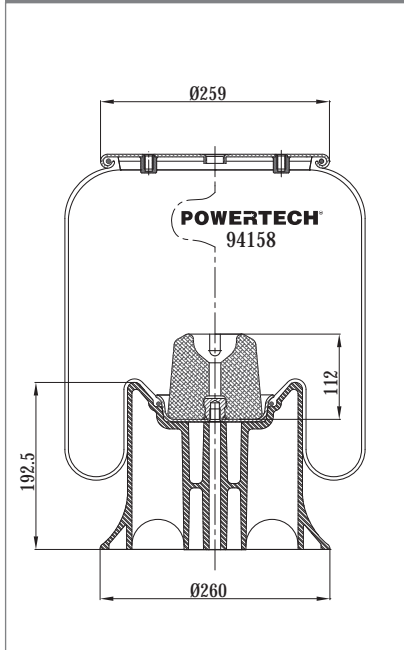

TOP VIEW

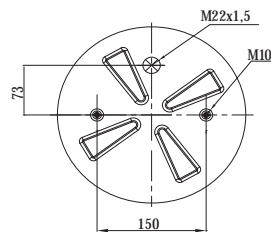

BOTTOM VIEW

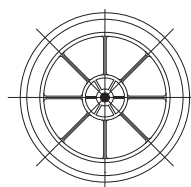

>> CROSS REFERENCE



• AIRTECH	133202
	34158 KPP
• CONTITECH	4158 N P03
• FIRESTONE	W01 M58 8185
• PHOENIX	1 DK 20 B-1
• DUNLOP FR	D12B22
• VIBRACOUSTIC	V1 DK 20 B-1

>> OEM REFERENCE

• SCHMITZ	750 999
• WEWELER	US 06285

Order No : 135044 / 94183-23 K



Complete

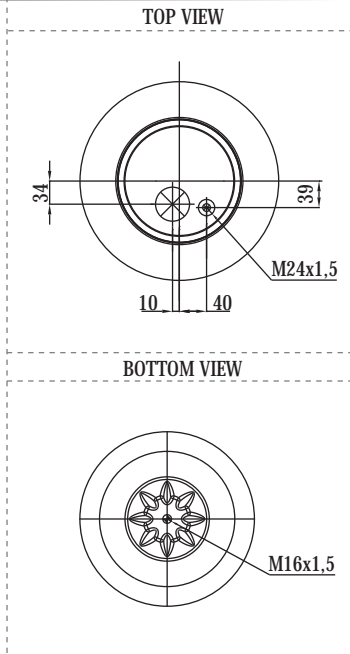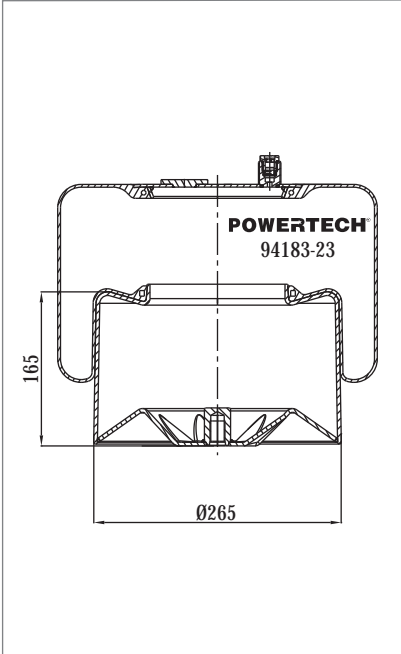

>> CROSS REFERENCE		>> OEM REFERENCE	
• AIRTECH	135042	• DAIMLER CHRYSLER	A 942 320 22 21
	34183-23 K		
• CONTITECH	4183 N P23		

Order No : 135824 / 94183-24 K



Complete

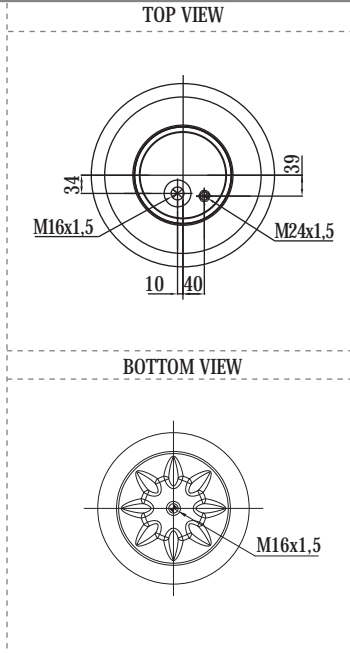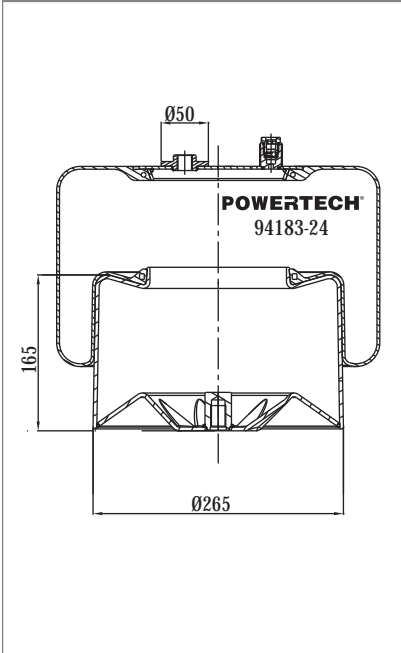

>> CROSS REFERENCE		>> OEM REFERENCE	
• AIRTECH	135822	• DAIMLER CHRYSLER	A 942 320 23 21
	34183-24 K		
• CONTITECH	4183 N P24		

Order No : 130984 / 94390-01 K



Complete

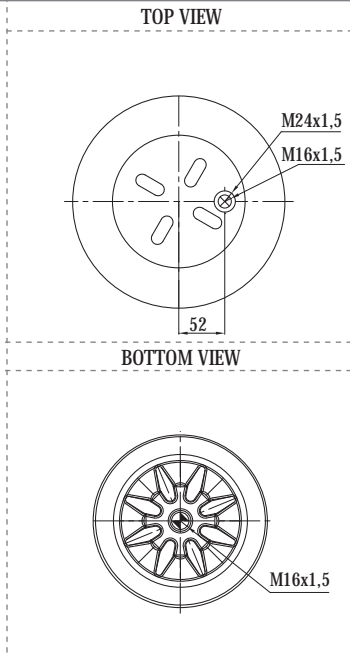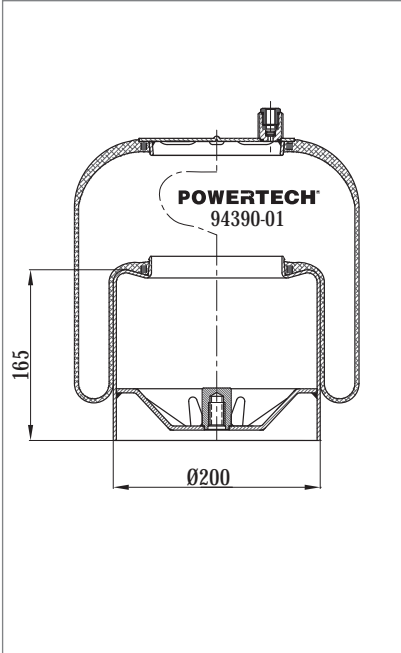

>> CROSS REFERENCE		>> OEM REFERENCE	
• AIRTECH	130982	• DAIMLER CHRYSLER	A 942 320 01 21
	34390-01 K		
• CONTITECH	4390 N P01		
• DUNLOP FR	D12T10		
• GOODYEAR	9505		

Order No : 131004 / 94390-02 K



Complete

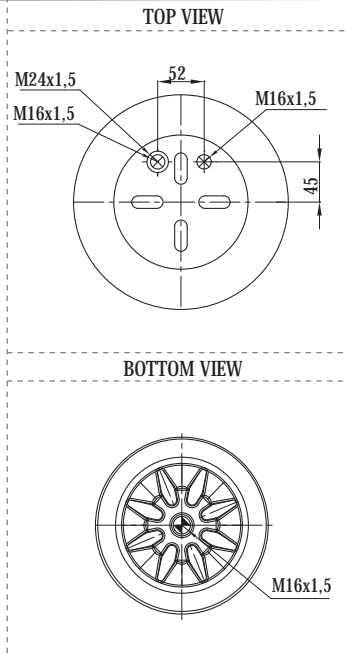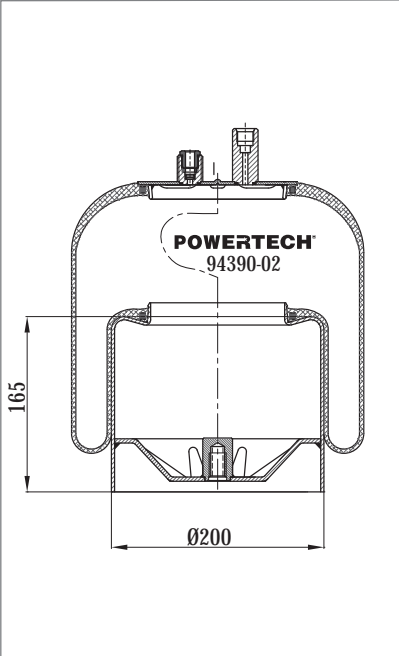

>> CROSS REFERENCE		>> OEM REFERENCE	
• AIRTECH	131002	• DAIMLER CHRYSLER	A 942 320 02 21
	34390-02 K		
• CONTITECH	4390 N P02		
• DUNLOP FR	D12T11		
• GOODYEAR	9506		

Order No : 131845 / 94713 K



Complete

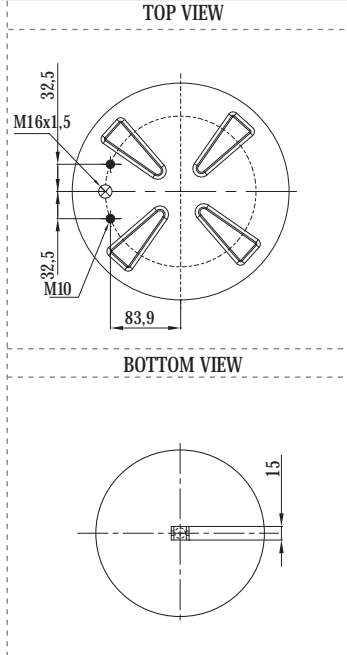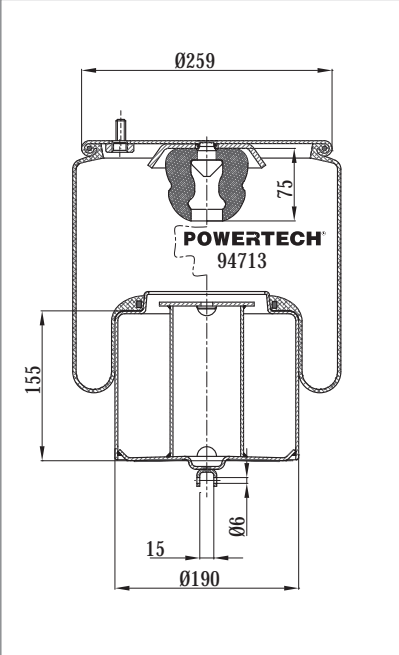

>> CROSS REFERENCE		>> OEM REFERENCE	
• AIRTECH	131842	• VOLVO	1 076 594
	34713 K		
• CONTITECH	4713 N P02		
• DUNLOP FR	D12B24		
• GOODYEAR	1R12-762		
• CF GOMMA	1 TS 300-28		

Order No : 131965 / 94718 K

Complete

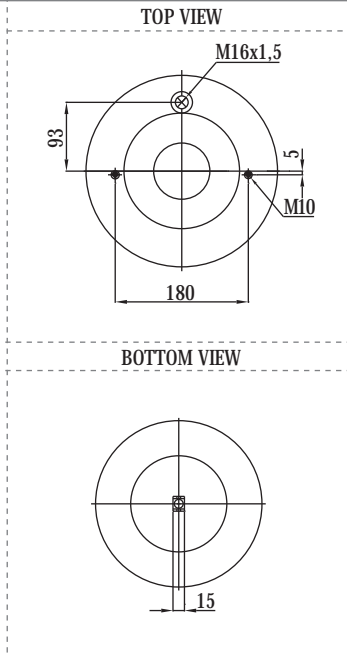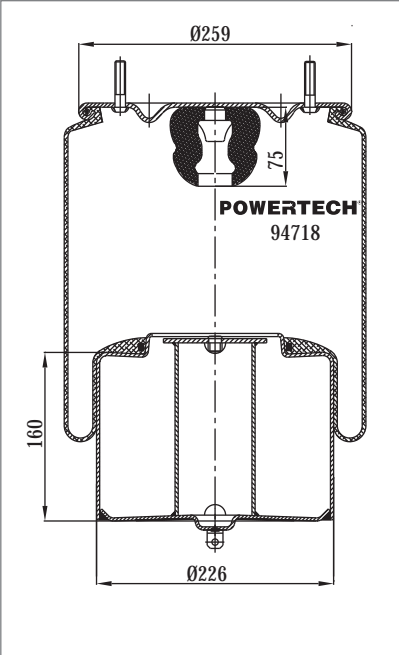


>> CROSS REFERENCE		>> OEM REFERENCE	
• AIRTECH	131962	• VOLVO	20 554 759
	34718 K		
• CONTITECH	4718 N P01		


Threaded hole
 Air inlet
 Bolt/Stud
 Combo stud

Order No : 132984 / 94757 - 01 K


Complete

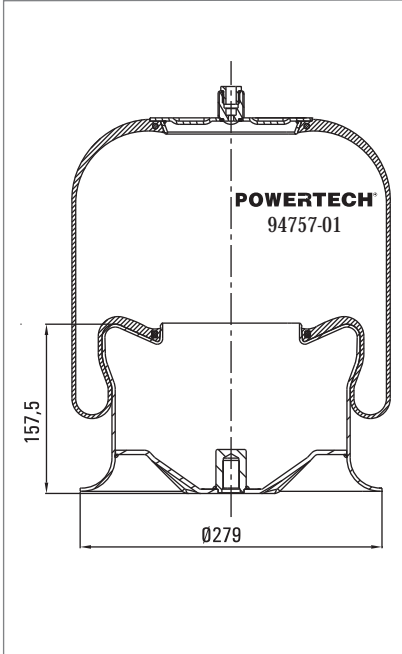

TOP VIEW

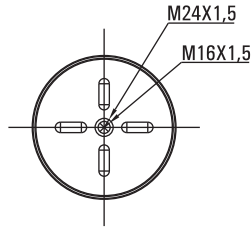

BOTTOM VIEW

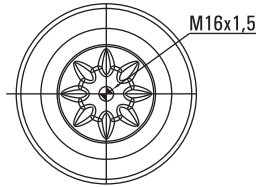

>> CROSS REFERENCE


• AIRTECH	132982
	34757-01 K
• CONTITECH	4757 N P01
• DUNLOP FR	D13T01
• GOODYEAR	9519
• CF GOMMA	1VSC 300-26
	206785

>> OEM REFERENCE


• DAIMLER CHRYSLER	A 942 320 01 17
--------------------	-----------------

Order No : 133004 / 94757 - 02 K


Complete

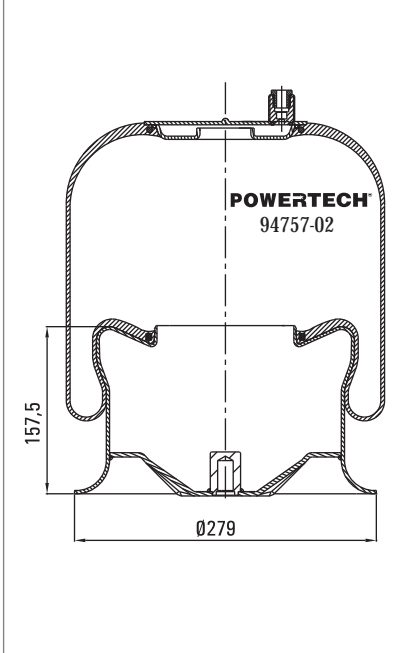

TOP VIEW

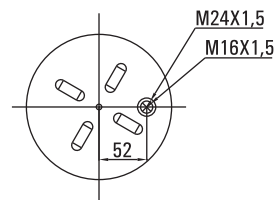

BOTTOM VIEW

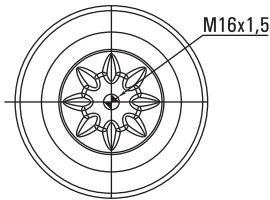


>> CROSS REFERENCE

• AIRTECH	133002
	34757 - 02K
• CONTITECH	4757 N P02


>> OEM REFERENCE

Order No : 130825 / 94813 K


Complete

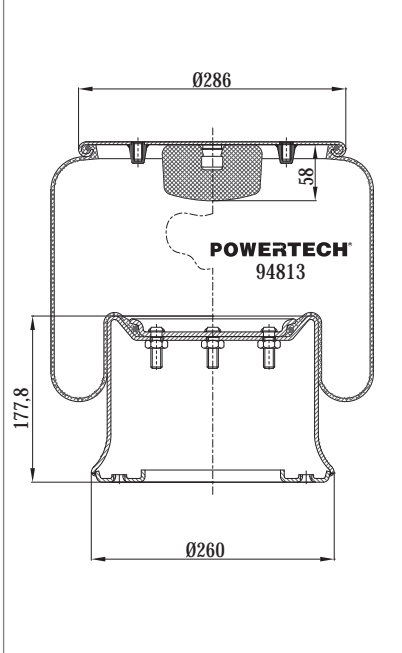

TOP VIEW

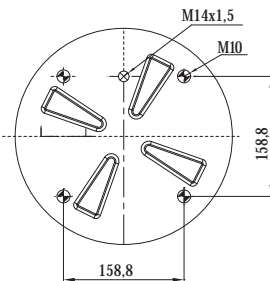

BOTTOM VIEW

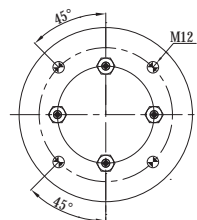

>> CROSS REFERENCE

• AIRTECH	130822
	34813 K
• CONTITECH	4813 N P07
• FIRESTONE	1T19L11
	W01 M58 7358
• PHOENIX	1D 28 B-9
• TAURUS	KR 622-01
• DUNLOP FR	D13B10
• GOODYEAR	1R14-727
• CF GOMMA	1T 19E-2 BR
	97764

>> OEM REFERENCE

• SAF	3.229.0005.00
• SCANIA	255295
	325748
	298568
	255293
	1107674
	1314906

⊕ Threaded hole


⊗ Air inlet

○ Bolt/Stud


⊗ Combo stud

Order No : 131864 / 94881-01 K


Complete

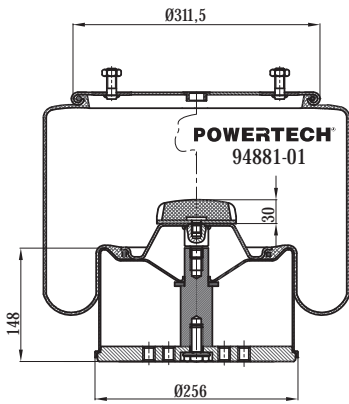

TOP VIEW

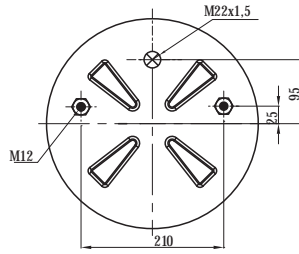

BOTTOM VIEW

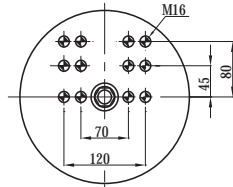

>> CROSS REFERENCE


- AIRTECH 131862 34881-01 K
- FIRESTONE 1T66F-7.0 W01 M58 8602
- GOODYEAR 1R14-724

>> OEM REFERENCE


- BPW BPW 36 K

Order No : 133344 / 94881-01 KPP


Complete

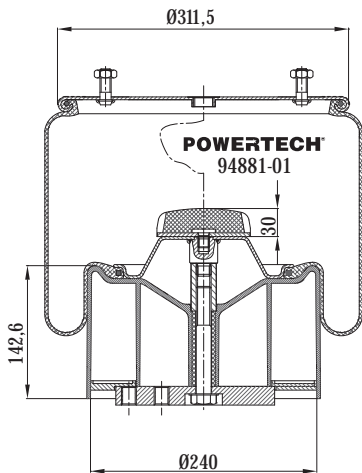

TOP VIEW

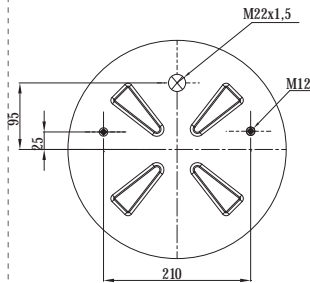

BOTTOM VIEW

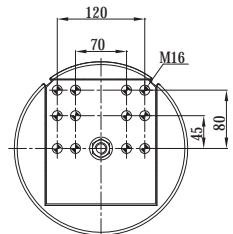

>> CROSS REFERENCE


- AIRTECH 133342 34881-01 KPP
- DUNLOP FR D14B44
- GOODYEAR 1R14-757
- PHOENIX 1 DK 32 K-2

>> OEM REFERENCE


- BPW 05.429.43.41.0 BPW 36 K

Order No : 135514 / 94882 K


Complete

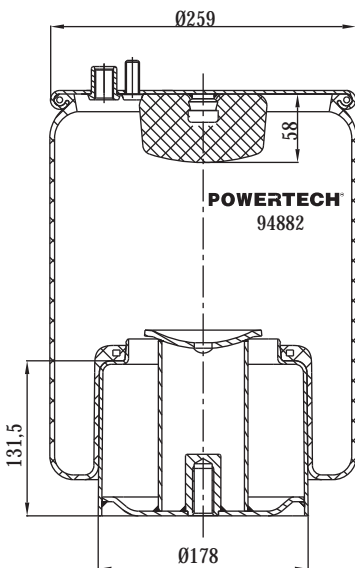

TOP VIEW

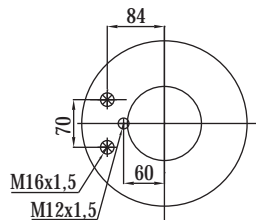

BOTTOM VIEW

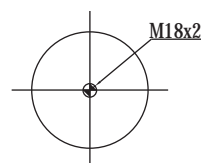

>> CROSS REFERENCE


- AIRTECH 135512 34882 K
- CONTITECH 4882 N1 P05

>> OEM REFERENCE


- M.A.N. 81.43600.6036

Order No : 135534 / 94884 K


Complete

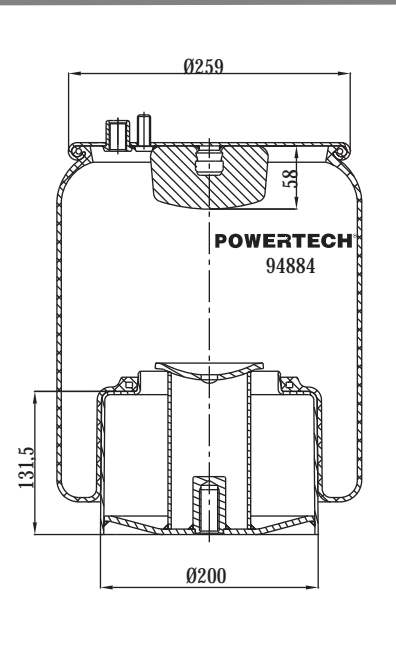

TOP VIEW

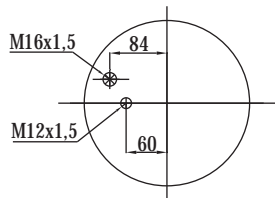

BOTTOM VIEW

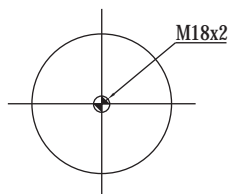

>> CROSS REFERENCE


• AIRTECH	135532 34884 K
• CONTITECH	4884 N1 P06

>> OEM REFERENCE


• M.A.N.	81.43600.6035
----------	---------------

Order No : 131184 / 94911 K


Complete

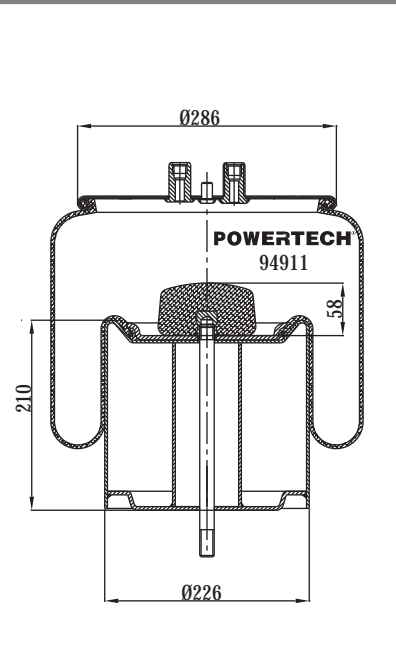

TOP VIEW

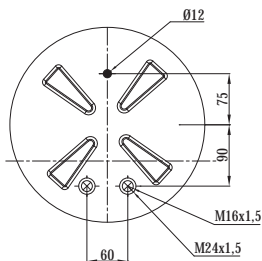

BOTTOM VIEW

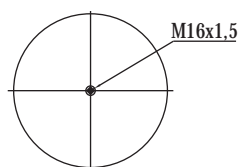

>> CROSS REFERENCE


• AIRTECH	131182 34911 K
• CONTITECH	4911 N P03
• GOODYEAR	1R13-714

>> OEM REFERENCE


• RVI	5.010.239.971 5.010.557.356
-------	--------------------------------

Order No : 131204 / 94912 K


Complete

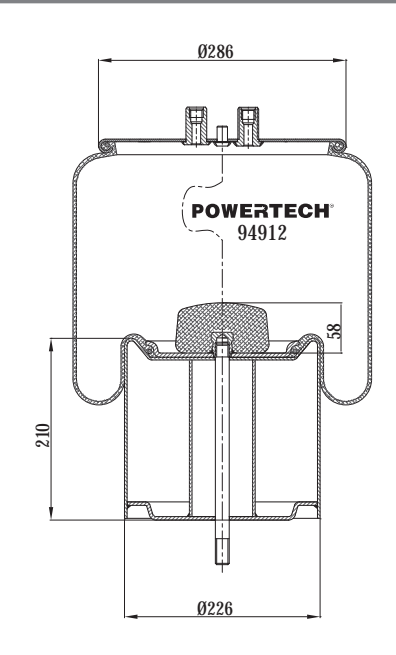

TOP VIEW

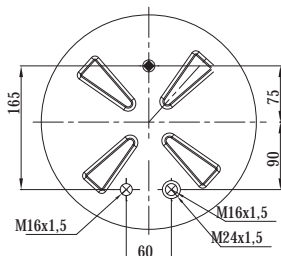

BOTTOM VIEW

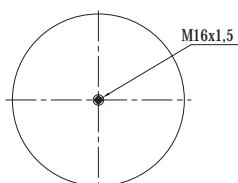

>> CROSS REFERENCE




• AIRTECH	131202 34912 K
• CONTITECH	4912 N P07

>> OEM REFERENCE

• GRANNING	15910
• RVI	5.010.294.307

Order No : 132125 / 94913 K




Complete

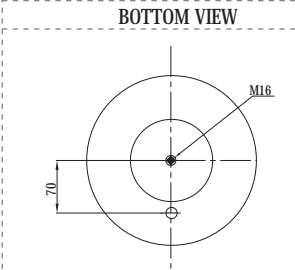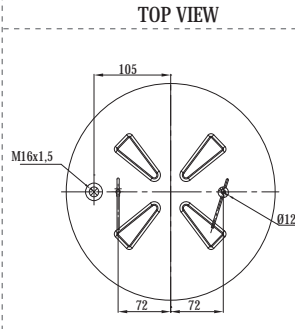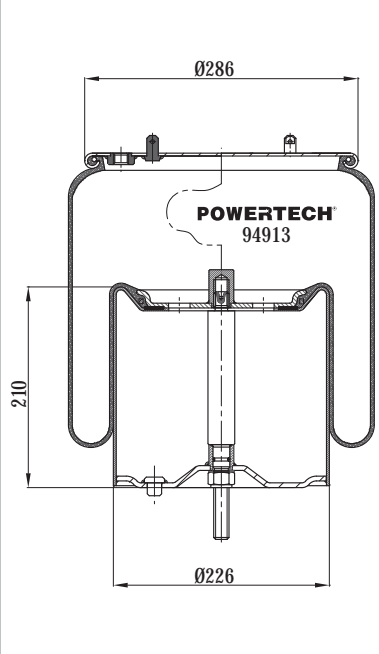

>> CROSS REFERENCE		>> OEM REFERENCE	
• AIRTECH	132122 34913 K	• SCANIA	1379392 1440294
• CONTITECH	4913 N P02		
• FIRESTONE	1T19 F-14 W01 095 0366		
• TAURUS	KR 625-16		
• CF GOMMA	1T 19E-93		

Order No : 132004 / 94925 K




Complete

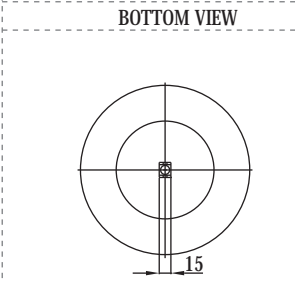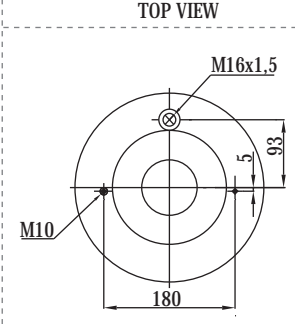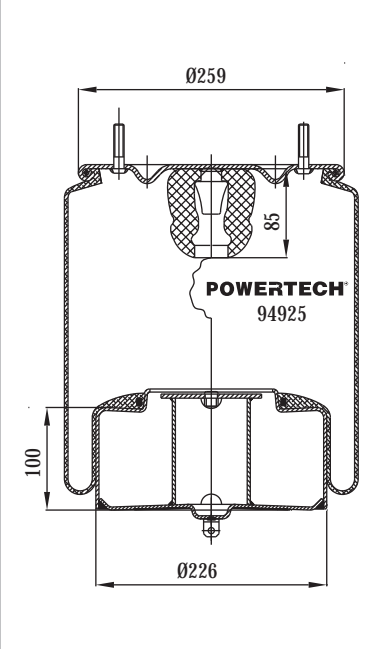

>> CROSS REFERENCE		>> OEM REFERENCE	
• AIRTECH	132002 34925 K	• VOLVO	20 554 761 1 075 365
• CONTITECH	6609 N P01		1 629 782 20 452 138

Order No : 135834 / 96108 K

Complete

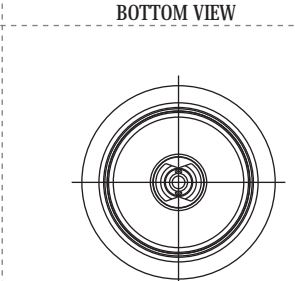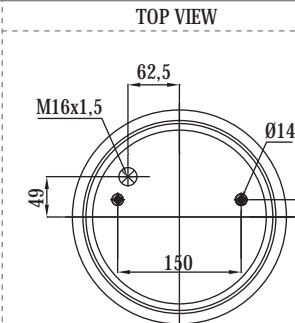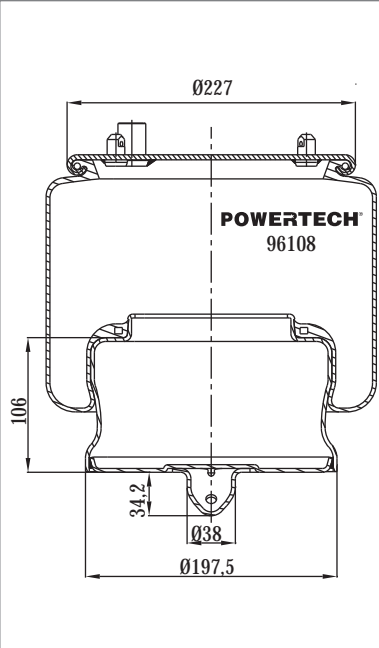

>> CROSS REFERENCE		>> OEM REFERENCE	
• AIRTECH	135832 36108 K	• VOLVO	20 573 108 70 321 692
• CONTITECH	6604 N P01		70 313 718 B12 B Bus

Threaded hole
 Air inlet
 Bolt/Stud
 Combo stud


Order No : 132865 / 96199 K

Complete


>> CROSS REFERENCE

>> OEM REFERENCE


• AIRTECH	132862 36199 K	• SCANIA	1386199
• PHOENIX	1 DF 23 C-1		

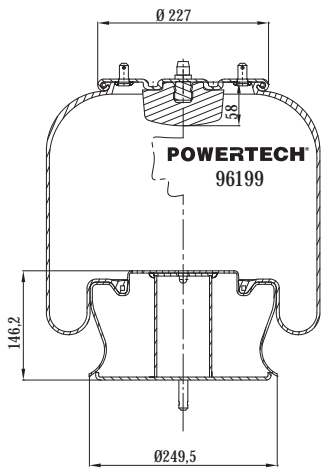

TOP VIEW

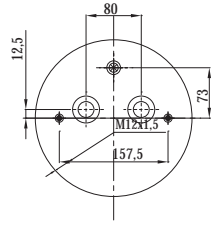

BOTTOM VIEW

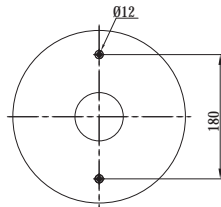


Order No : 133185 / 96200 K

Complete


>> CROSS REFERENCE

>> OEM REFERENCE


• AIRTECH	133182 36200 K	• SCANIA	1386200
• PHOENIX	1 DF 23 D-1		

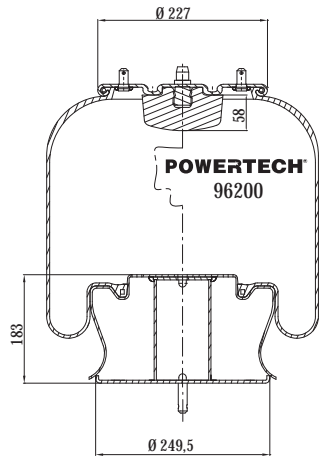

TOP VIEW

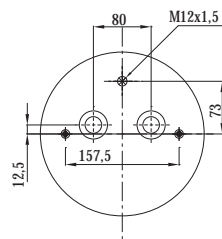

BOTTOM VIEW

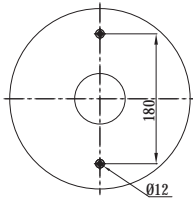


Order No : 134765 / 96251 K

Complete


>> CROSS REFERENCE

>> OEM REFERENCE


• AIRTECH	134762 36251 K	• GRANNING	15619
• FIRESTONE	1T15LP-3	• SCANIA	1314903 1402423
• GOODYEAR	W01 M58 6251 1R11-826		

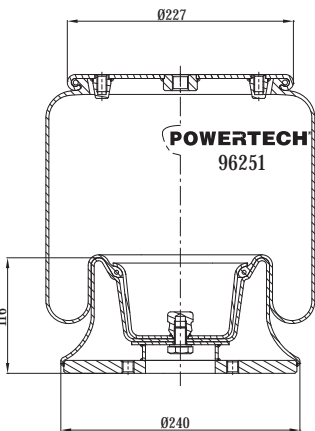

TOP VIEW


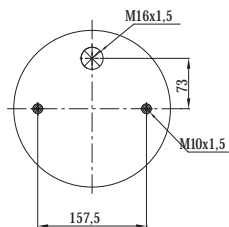


BOTTOM VIEW

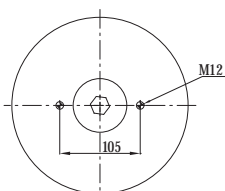


Order No : 132905 / 96416 K

Complete

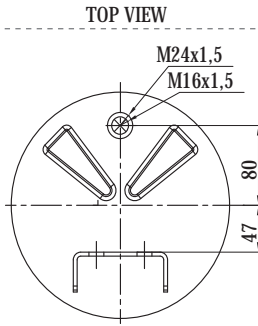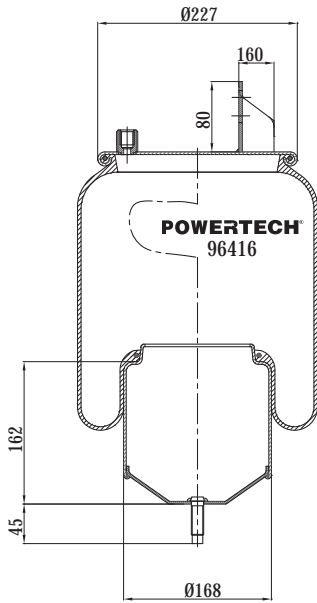

BOTTOM VIEW

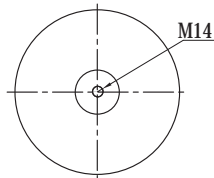

>> CROSS REFERENCE


• AIRTECH	132902
	36416 K
• CONTITECH	6608 N P01

>> OEM REFERENCE


• VOLVO	20 582 215
	20 531 985
	20 456 152
	20 374 510
	3 171 693
	1 076 416

Order No : 134304 / 96418 K


Complete

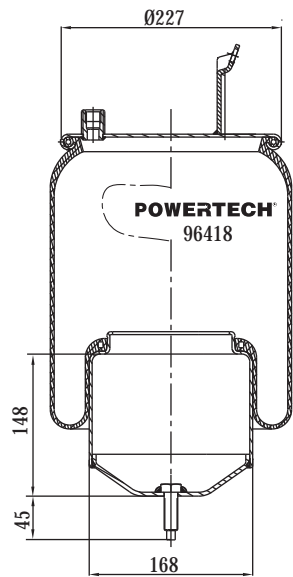

TOP VIEW

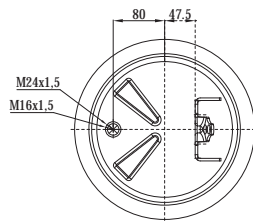

BOTTOM VIEW

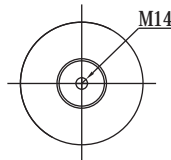

>> CROSS REFERENCE


• AIRTECH	134302
	36418 K
• CONTITECH	6607 N P01

>> OEM REFERENCE


• VOLVO	20 582 214
	20 531 987
	20 456 156
	20 374 511
	3 171 695
	1 076 418

Order No : 135585 / 97803 K


Complete

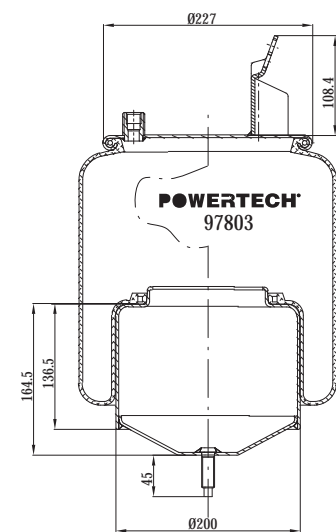

TOP VIEW

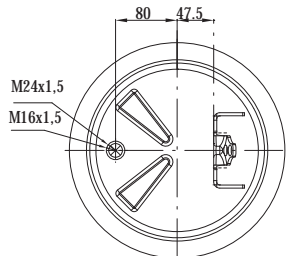

BOTTOM VIEW

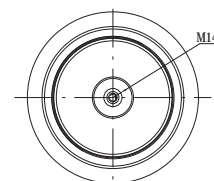

>> CROSS REFERENCE


• AIRTECH	135582
	37803 K
• CONTITECH	6605 N P01

>> OEM REFERENCE


• VOLVO	20 582 206
	20 531 984
	20 456 150
	20 427 800
	20 427 803
	3 171 692

Order No : 134464 / 97804 K


Complete

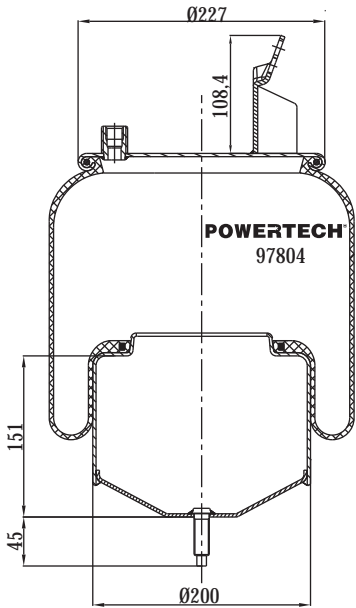

TOP VIEW

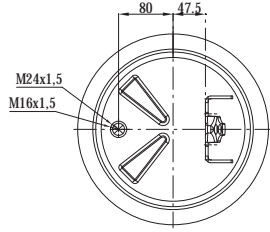

BOTTOM VIEW

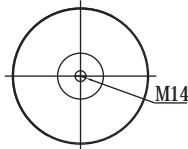

>> CROSS REFERENCE


- AIRTECH 134462
37804 K
- CONTITECH 6606 N P01

>> OEM REFERENCE


- VOLVO 20 582 209
20 531 986
20 456 154
20 427 801
20 427 804
3 171 694

Order No : 133784 / 98185 KPP


Complete

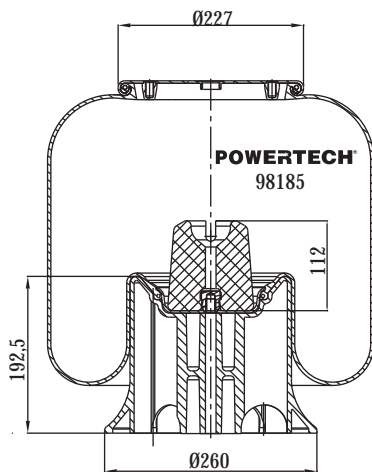

TOP VIEW

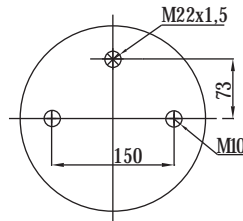

BOTTOM VIEW

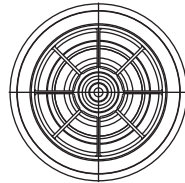

>> CROSS REFERENCE


- AIRTECH 133782
38185 KPP
- FIRESTONE 1T15MPW-9
W01 M58 8185
W01 M58 6285
- GOODYEAR 1R12-749
- PHOENIX 1DK 20 B-1

>> OEM REFERENCE


- SCHMITZ 750 999
- WEWELER US 06285F

Order No : 133325 / 99002-A3-01 KPP


Complete

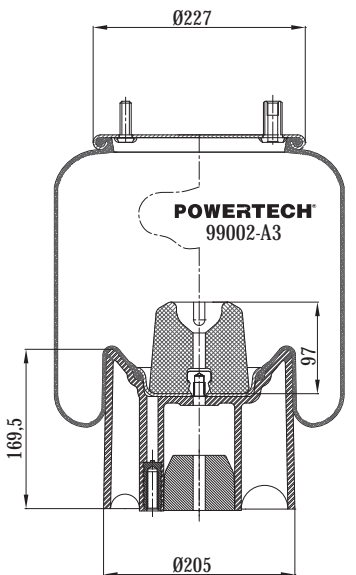

TOP VIEW

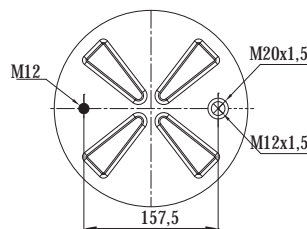

BOTTOM VIEW

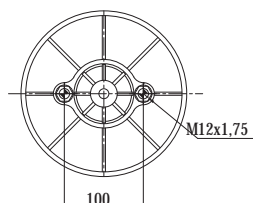

>> CROSS REFERENCE

- AIRTECH 133322
39002-A3-01 KPP
- FIRESTONE 1T15MPW-7
W01 M58 6315
- GOODYEAR 1R11-772

>> OEM REFERENCE

- ACERBI 441901
- FRUEHAUF M060924
UJB 0975

